



## SOURCE DRAWING - FOR REFERENCE ONLY

1. INTERNAL VOLTAGE MONITORING CIRCUITRY IS LOCATED BETWEEN PINS 2 AND 3.  FINISH  DAMNIG ARE FOR REFERENCE ONLY  CONTACT TURCK EFOR MODE  AND INTERNAL VOLTAGE MONITORING CIRCUITRY IS LOCATED BETWEEN PINS 2  IDENTIFICATION NO.	3000 CAMPUS [ MINNEAPOLIS, MI 1-800-544-7 (763) 553-73 (763) 553-07 www.turck.us	55441 7769 300 708 fax
AND 3.  FINISH  REFERENCE ONLY  CONTACT TURCK FOR MORE  FOR MORE  CONTACT TURCK FOR MORE  FINISH  U	57VM-E434	
- I	683-44	REV
G UPDATED NOTES AND WIRING DIAGRAM PER ECO TV 08/26/16 56165 INFORMATION		
EV DESCRIPTION BY DATE ECO NO. DO NOT SCALE THIS DRAWING FILE: U8683-44	SHEET	1 OF 1