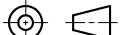


SOURCE DRAWING - FOR REFERENCE ONLY

INSTRUCTIONS:

1. INSTALL PILOT HOLE IN PANEL OR ENCLOSURE REQUIRING DOUBLE "D" PUNCH.
2. FULLY SEAT DRAW STUD INTO PILOT HOLE AND PUNCH.
3. LUBRICATE THREADS AND ATTACH COUNTER NUT.
4. DIE SHALL FIT OVER DRAW STUD.
- 5 LUBRICATE THREADS AND ATTACH BALL BEARING DRIVE NUT.

RELATED DOCUMENTS 1. 2. 3. 4.	3RD ANGLE PROJECTION		THIS DRAWING IS PROPERTY OF TURCK INC. USE OF THIS DOCUMENT WITHOUT WRITTEN PERMISSION IS PROHIBITED.	<div>TURCK inc</div> <div>High Technology Sensors and Automation Controls</div> <div>3000 CAMPUS DRIVE MINNEAPOLIS, MN 55441 1-800-544-7769 (763) 553-7300 (763) 553-0708 fax turck.com</div>			
MATERIAL TOOL STEEL	ALL DIMENSIONS DISPLAYED ON THIS DRAWING ARE FOR REFERENCE ONLY	DRFT	GJA	DATE	09/06/01	DESCRIPTION FK(S)FD – TOOL	
FINISH BLACK ANODIZED		DSGN		SCALE	1=1		
	CONTACT TURCK FOR MORE INFORMATION	UNIT OF MEASUREMENT				IDENTIFICATION NO. A2550	REV A
		MILLIMETER [INCH]					
		DO NOT SCALE THIS DRAWING				FILE: A2550	SHEET 1 OF 1