
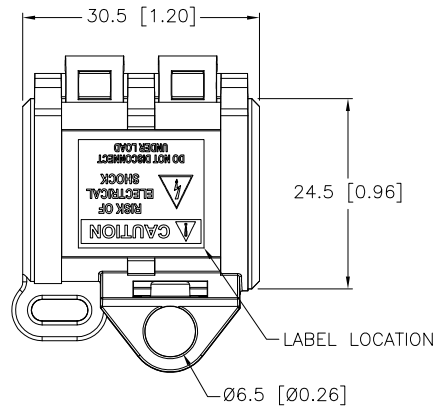



# SPECIFICATIONS

HOUSING MATERIAL/COLOR

NYLON 66/ YELLOW

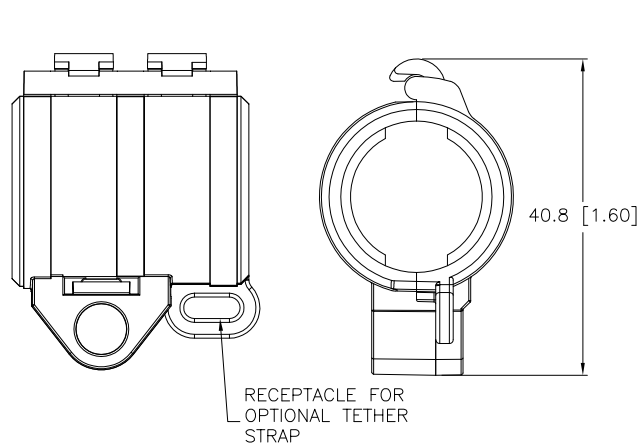

TO REMOVE POWER LOCK DEVICE, INSERT SMALL SCREWDRIVER INTO LOCKING GROOVE AS SHOWN IN PICTURE. ROTATE SCREWDRIVER IN DIRECTION SHOWN UNTIL LOCKING DEVICE RELEASES.

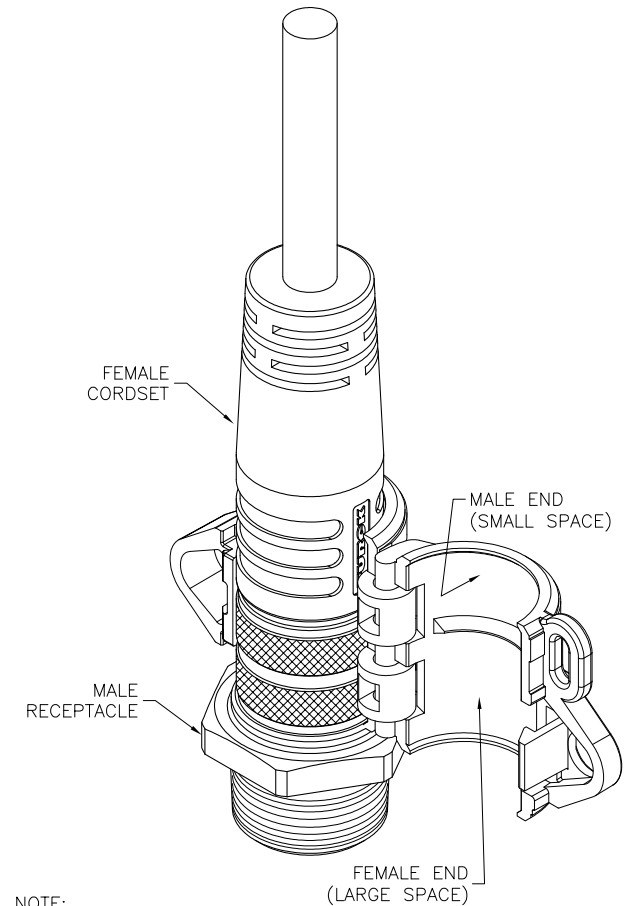

NOTE:  
TO INSTALL POWER LOCK DEVICE, THE DEVICE MUST BE PLACED IN THE CORRECT ORIENTATION. PLACE LARGE SPACE BETWEEN RIB AND END OF POWER LOCK HOUSING ON THE FEMALE COUPLING NUT OR PLACE SMALL SPACE BETWEEN RIB AND END OF POWER LOCK HOUSING ON THE MALE COUPLING NUT. PART OF THE POWER LOCK DEVICE WILL OVERLAP THE CORDSET'S OVERMOLD. FINALLY, PLACE AROUND CORDSET END AND CLOSE UNTIL POWER LOCK SNAPS CLOSED.

SOURCE DRAWING - FOR REFERENCE ONLY

RELATED DOCUMENTS		3RD ANGLE PROJECTION		THIS DRAWING IS PROPERTY OF TURCK INC. USE OF THIS DOCUMENT WITHOUT WRITTEN PERMISSION IS PROHIBITED.		3000 CAMPUS DRIVE MINNEAPOLIS, MN 55441 1-800-544-7769 (763) 553-7300 (763) 553-0708 fax turck.com	
1. 2. 3. 4.		ALL DIMENSIONS DISPLAYED ON THIS DRAWING ARE FOR REFERENCE ONLY		DRFT RWC		DATE 11/24/08	
MATERIAL		SEE SPECIFICATIONS		DSGN		SCALE 1=1.0	
FINISH		SEE SPECIFICATIONS		UNIT OF MEASUREMENT		DESCRIPTION	
		CONTACT TURCK FOR MORE INFORMATION		MILLIMETER [ INCH ]		LOCK-M16	
				DO NOT SCALE THIS DRAWING		IDENTIFICATION NO.	
						A9507	
						REV	
						A	
						FILE: A9507	
						SHEET 1 OF 1	

A	DRAWING RELEASE	TR	03/18/09	
REV	DESCRIPTION	BY	DATE	ECO NO.