
B2N85H-Q20L60-2LI2-H1151 Inclinometer

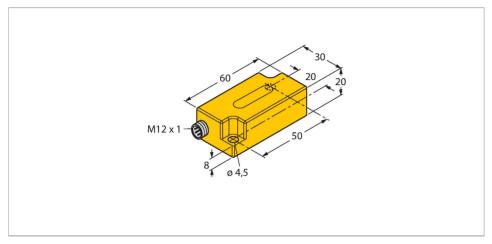


Technical data


Туре	B2N85H-Q20L60-2LI2-H1151
Ident. no.	1534032
Measuring range	-8585 °
Measuring range x-axis	-8585 °
Measuring range y-axis	-8585 °
Number of measuring axes	2
Repeatability	≤ 0.2 % of measuring range A - B
Linearity deviation	≤ 1 %
Temperature drift	≤ ± 0.02 % / K
Resolution	≤ 0.14 °
Ambient temperature	-30+70 °C
Operating voltage	1030 VDC
Isolation test voltage	≤ 0.5 kV
Short-circuit protection	yes
Wire breakage/Reverse polarity protection	no / yes
Output function	5-pin, Analog output
Current output	420 mA
Load resistance, current output	≤ 0.2 kΩ
Response time	0.1 s
	time for the output signal to achieve 90% of full scale if the angle changes from -85° to +85°
Current consumption	50 mA
Design	Rectangular, Q20L60
Dimensions	60 x 30 x 20 mm

Features

- ■Plastic, PC
- ■Zero point calibration +/- 15°
- ■Two analog outputs
- ■M12 x 1 male connector

Wiring diagram






Functional principle


Inclination is determined by a wear-free semiconducting sensor element.

Housing material	Plastic, PC
Electrical connection	Connector, M12 × 1
Vibration resistance	55 Hz (1 mm)
Shock resistance	30 g (11 ms)
Protection class	IP68 / IP69K
MTTF	203 years acc. to SN 29500 (Ed. 99) 40 °C

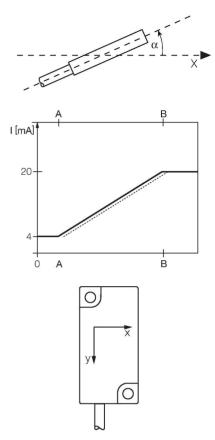

Mounting instructions

Mounting instructions/Description

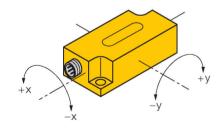

Accessories

GUARD-Q20L60

A9684
Protective housing for Q20L60
inclinometers for protecting against mechanical impact; material:

Stainless steel

Teaching

The zero point can be adjusted with teach adapter TX1-Q20L60.

Teach-GND is pressed for approx. 1 s to do this. The outputs are switched to 20 mA as confirmation.

Teach-GND is pressed for 6 s to reset the axis zero points. The outputs are switched to 4mA as confirmation.

Once the teach button is released, the sensor returns to normal operation.