# X20BM13, X20BM16, X20BM23, X20BM26, X20(c)BM33, X20BM36

## 1 General information

Bus modules serve as the basis for all SafeIO modules.

Depending on the bus module type, the internal I/O power supply is continuous or interrupted to the left.

With X20BMx6 bus modules, fixed addresses can be set via node number switches. One of these modules at the beginning of an X20 block always generates a unique address. The subsequent modules then automatically increment from this address. This simple feature greatly increases the flexibility of applications.

Another advantage: Addresses can be set independently of specific I/O modules; only the necessary bus modules are required, which is logistically advantageous in terms of the cost and diversity of parts.

	X20BM13	X20BM16	X20BM23	X20BM26	X20BM33	X20BM36	
Bus module type	X20 SafeIO modules		X20 SafeIO pow	er supply module	X20 SafeIO modules		
Formation of potential groups possible	N	0	Ye	es	No		
Internal I/O power supply	Continuous		Interrupted to the left		Continuous		
Manual node number assignment possible	No	Yes	No	Yes	No	Yes	
Single-width	Yes		No				

## 2 Coated modules

Coated modules are X20 modules with a protective coating for the electronics component. This coating protects X20c modules from condensation.

The modules' electronics are fully compatible with the corresponding X20 modules.

## Information:

For simplification purposes, only images and module IDs of uncoated modules are used in this data sheet.

The coating has been certified according to the following standards:

- · Condensation: BMW GS 95011-4, 2x 1 cycle
- Corrosive gas: EN 60068-2-60, Method 4, exposure 21 days

Contrary to the specifications for X20 system modules without safety certification and despite the tests performed, X20 safety modules are **NOT suited for applications with corrosive gases (EN 60068-2-60)!** 





## 2.1 Starting temperature

The starting temperature describes the minimum permissible ambient temperature when the power is switched off at the time the coated module is switched on. This is permitted to be as low as -40°C. During operation, the conditions as specified in the technical data continue to apply.

## Information:

It is important to absolutely ensure that there is no forced cooling by air currents in the closed control cabinet, e.g. due to the use of a fan or ventilation slots.

# 3 Order data



Table 1: X20BM13, X20BM16, X20BM23, X20BM26, X20BM33, X20cBM33, X20cBM36 - Order data

# 4 Technical data

Model number	X20BM13	X20BM16	X20BM23	X20BM26	X20BM33	X20cBM33	X20BM36
Short description							
Bus module	Bus mod- ule, for X20 SafeIO mod- ules, internal I/ O power supply continuous	Bus module, for X20 SafeIO modules, with node number switch, internal I/O power sup- ply continuous	Power supply bus module, for X20 SafeIO power sup- ply modules, internal I/ O power sup- ply interrupt- ed to the left	Power supply bus module, for X20 SafeIO power supply modules, with node number switch, internal I/O power sup- ply interrupt- ed to the left	modules	for X20 SafeIO , internal I/O oly continuous	Bus module, for X20 SafeIO modules, with node number switch, internal I/O power sup- ply continuous
General information							
Power consumption							
Bus				0.13 W			
Internal I/O				-			
Additional power dissipation caused by actuators (resistive) [W]		-					
Certifications							
CE	7	1	I	Yes		UA TE O	
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÚ 09 ATEX 0083X	E Ex nA IP20, Ta (see X20 user's manual)  IA T5 Gc FTZÚ 09 ATEX 0083X  0, Ta (see 0 0 user's anual)  anual)  IZÚ 09					
UL	cULus E115267 Industrial control equipment						
HazLoc	cCSAus	In preparation					
	244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5			for	cess control equipment r hazardous locations Division 2, Groups ABCD, T5		
DNV GL	In preparation		Temperature: <b>B</b> (0 - 55°C)  Humidity: <b>B</b> (up to 100%)  Vibration: <b>B</b> (4 g)  EMC: <b>B</b> (bridge and open deck)	In preparation	Temperature: <b>B</b> (0 - 55°C) Humidity: <b>B</b> (up to 100%) Vibration: <b>B</b> (4 g) EMC: <b>B</b> (bridge and open deck)		In preparation
LR	_		ENV1	-	ENV1		-
KR	-		Yes	-	Yes		-
ABS		-	Yes	-		Yes	-
EAC				Yes			
KC		-	Yes	-	Yes		-
I/O power supply							
Nominal voltage	24 VDC						
Permissible contact load				10 A			
Operating conditions							
Mounting orientation							
Horizontal	Yes						
Vertical	Yes						
Installation elevation above sea level	0 to 2000 m, no limitation						
Degree of protection per EN 60529				IP20			
Ambient conditions							
Temperature							
Operation				051.0000			
Horizontal mounting orientation  Vertical mounting orientation	-25 to 60°C -25 to 50°C						
Derating				-			
Starting temperature	- Yes, -40°C -						
Storage	-40 to 85°C						
Transport				-40 to 85°C			

Table 2: X20BM13, X20BM16, X20BM23, X20BM26, X20BM33, X20cBM33, X20cBM36 - Technical data

# X20BM13, X20BM16, X20BM23, X20BM26, X20(c)BM33, X20BM36

Model number	X20BM13	X20BM16	X20BM23	X20BM26	X20BM33	X20cBM33	X20BM36
Relative humidity							
Operation		, ,				Up to 100%, condensing	5 to 95%, non- condensing
Storage	5 to 95%, non-condensing						
Transport	5 to 95%, non-condensing						
Mechanical properties							
Pitch	12.5 <sup>+0.2</sup> mm 25 <sup>+0.2</sup> mm						

Table 2: X20BM13, X20BM16, X20BM23, X20BM26, X20BM33, X20cBM33, X20cBM36 - Technical data

# 5 Voltage routing

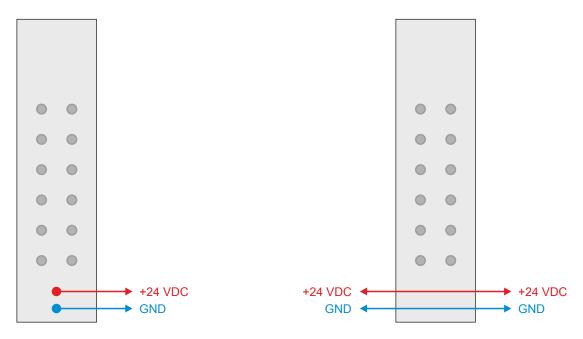


Figure 1: X20BM2x - Voltage routing

Figure 2: X20BM1x / X20BM3x - Voltage routing

# Voltage routing identification

A symbol is printed on the locking lever on bus modules interrupted to the left. This makes it clear from the outside of a fully assembled X20 system that bus modules interrupted to the left are used in this slot.



Figure 3: X20BM2x - Voltage routing identification

# 6 Manual node number assignment in the X20 safe I/O system

With X20 safety bus modules X20BM16, X20BM26 and X20BM36, permanent addresses can be set using node number switches. This type of module placed at the beginning of an X20 safety block always creates a unique address. The subsequent module addresses are assigned automatically in ascending order starting with this address. This simple feature greatly increases the flexibility of applications.

Another advantage: Addresses can be set independently of specific I/O modules; only the necessary bus modules are required, which is logistically advantageous in terms of the cost and diversity of parts.

## 6.1 Node number switches

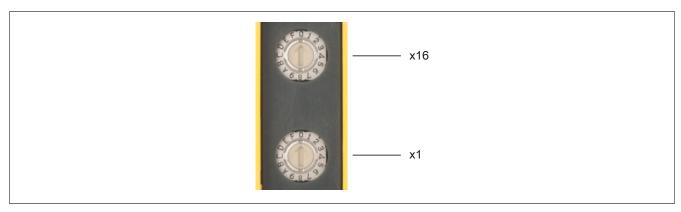


Figure 4: X20BMx6 - Node number switches

The X2X Link address of the module is set using the node number switches (0x01 to 0xFD). Setting node number 0x00 causes the X2X Link address to be assigned automatically.

#### Node number switch identification

Symbols are printed on the locking lever of bus modules with node number switches. This provides a way to see from outside that the X20 system mounted in this slot is using node number switches.



Figure 5: X20BMx6 - Node number switch identification

# 7 Version history

Version	Date	Comment			
2.07	August 2020	Chapter 4 "Technical data":			
		<ul> <li>General information: Added additional power dissipation caused by actuators (resistive) [W].</li> </ul>			
		<ul> <li>Updated certifications.</li> </ul>			
2.06	May 2020	Chapter 2 "Coated modules": Added description of starting temperature.			
		Chapter 4 "Technical data": Coated module: Added starting temperature.			
		Editorial changes.			
2.04	November 2019	Chapter 4 "Technical data": Updated certifications.			
2.02	May 2019	First edition for mapp Safety			

Table 3: Version history

# 8 EC declaration of conformity

This document was originally written in the German language. The German edition therefore represents the original documentation in accordance with the 2006/42/EC Machinery Directive. Documents in other languages should be interpreted as translations of the original documentation.

#### **Product manufacturer:**

**B&R Industrial Automation GmbH** 

**B&R Strasse 1** 

5142 Eggelsberg

Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

office@br-automation.com

The place of jurisdiction, in accordance with article 17 of the European Convention on Courts of Jurisdiction and Enforcement, is A-4910

Ried im Innkreis, Austria, commercial register court: Ried im Innkreis, Austria

Commercial register number: FN 111651 v.

The place of fulfillment in accordance with article 5 of the European Convention on Courts of Jurisdiction and Enforcement is A-5142 Eggelsberg, Austria

VATIN: ATU62367156

The EC declarations of conformity for B&R products can be downloaded from the B&R website <a href="www.br-automation.com">www.br-automation.com</a>.